



## 990CH SUMMER KIT INSTALLATION INSTRUCTIONS

990-SF-SK-102


990-SF-SK-101

990-SF-SK-104-LH

BACK BRICK

BOTTOM LEFT HAND BRICK

TOP LEFT HAND BRICK

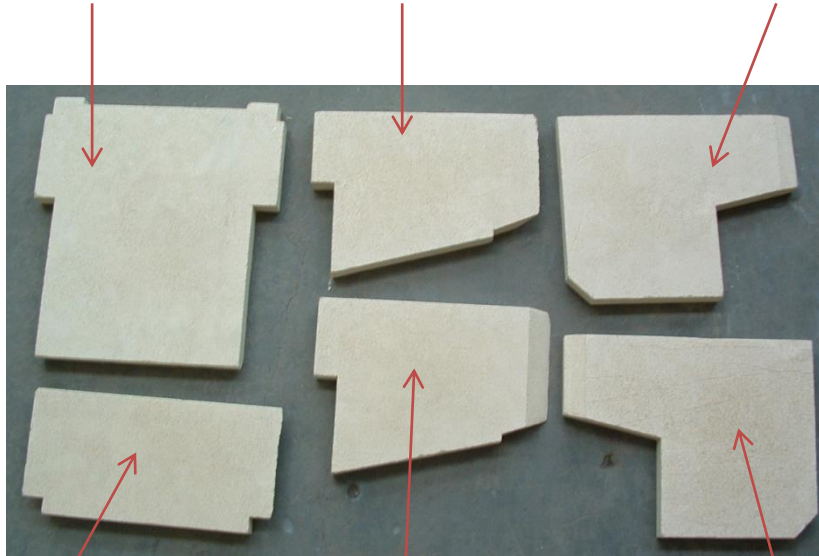

FRONT BRICK

BOTTOM RIGHT HAND BRICK

TOP RIGHT HAND BRICK

990-SF-SK-103


990-SF-SK-100

990-SF-SK-104-R



- 1) ALLOW THE FIRE TO GO OUT AND COOKER TO COOL DOWN, THEN CLEAR OUT THE FIRE BED

CHAMFER TO TOP BACK EDGE

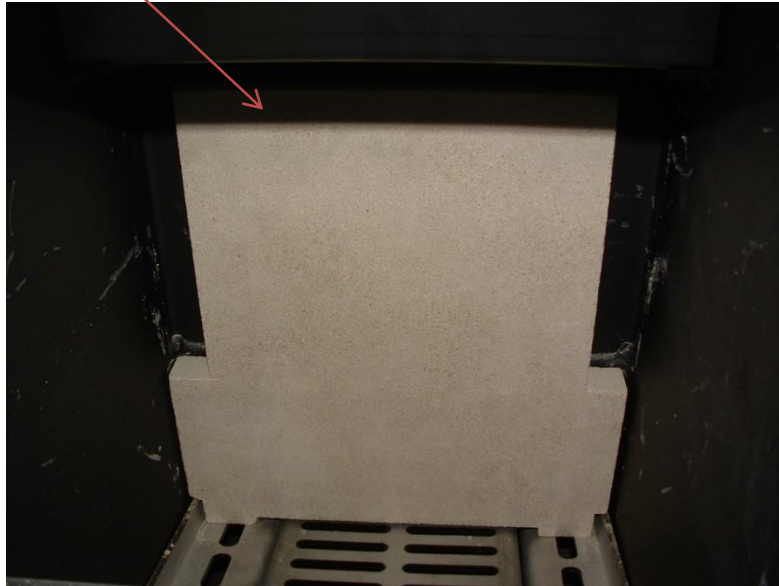

- 2) INSERT THE BACK BRICK (990-SF-SK-102) WITH THE CHAMFER TO THE TOP AND AGAINST THE BACK OF THE FIRE BOX

LOCKING NOTCH




CHAMFER

- 3) INSERT THE BOTTOM RIGHT HAND BRICK (990-SF-SK-100) WITH THE LOCKING NOTCH TO THE BACK AND CHAMFER TO THE FRONT



- 4) FIT THE BOTTOM LEFT HAND BRICK (990-SF-SK-101) IN THE SAME MANNER AS INSTRUCTION 3

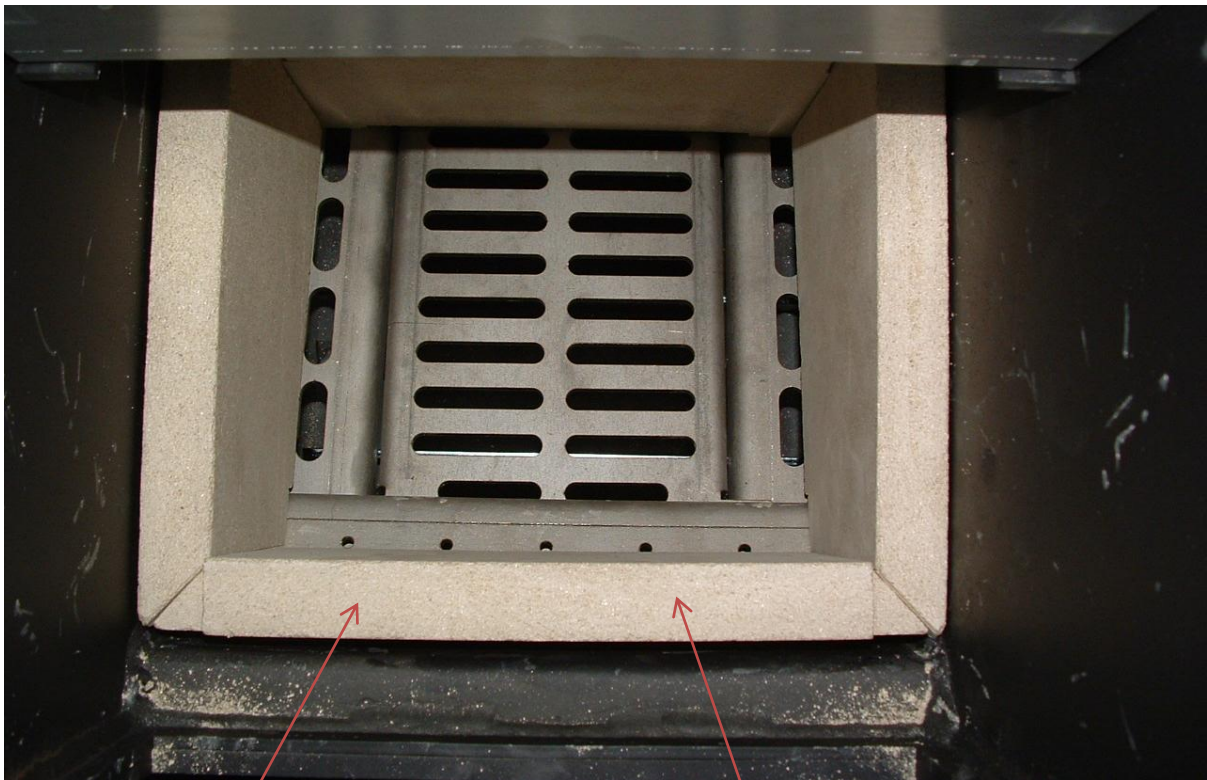


FRONT BRICK


RAISED NOTCH

- 5) INSERT THE FRONT BRICK (990-SF-SK-103) WITH THE RAISED NOTCH TO THE TOP

CHAMFER

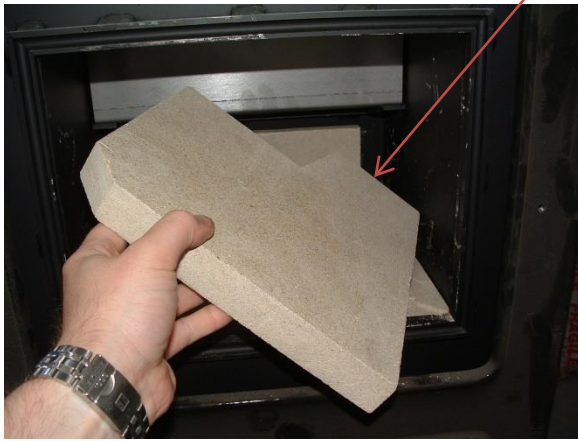


- 6) INSERT THE TOP RIGHT HAND BRICK (990-SF-SK-104-RH) SO THAT THE CHAMFER IS TO THE REAR AND SIDE OF THE FIRE BOX

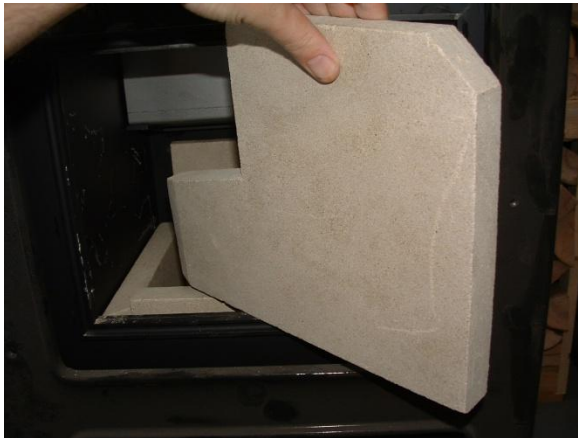

- 7) FIT THE TOP LEFT HAND BRICK (990-SF-SK-104-LH) IN THE SAME MANNER AS INSTRUCTION 6.

VIEW WITH HOTPLATE REMOVED

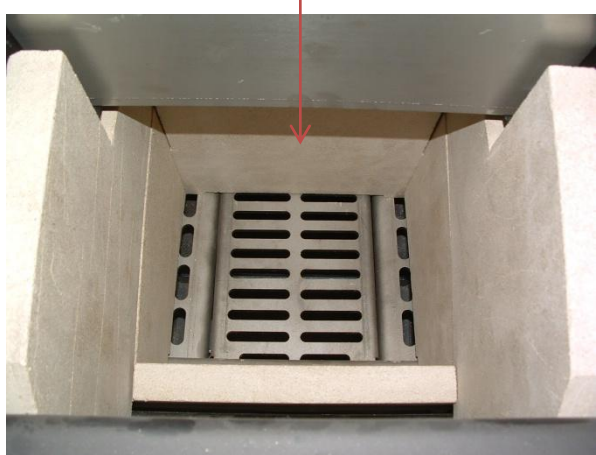

- 8) THE FIRE BOX SHOULD NOW LOOK AS ABOVE AND IS READY TO USE.